
PUSH-PULLERS®

Hydraulic $17^{1}/_{2}$, 30-50 Ton

The power to make impossible jobs become routine.

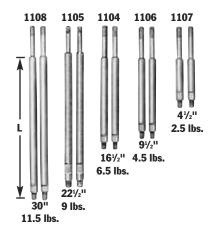


NOTE: L = leg length: $4^{1}/2^{1}$, $9^{1}/2^{1}$, $16^{1}/2^{1}$, $22^{1}/2^{1}$, 30^{1} ; subtract $4^{7}/8^{1}$ from leg length to determine reach when using leg end caps.

- Can apply a hydraulic pushing or pulling force, depending on how the puller is set up.
- Each unit includes perfectly matched hydraulic components that can be detached from the Push-Puller* for other tasks requiring dependable Power Team power; assuring maximum return on your in
- assuring maximum return on your investment.
- · Optional leg kits adapt your Push-Puller® to extra long or extra short reach.
- A wide variety of threaded adapters, bearing pulling attachments and internal pulling attachments can be used in combination with our Push-Pullers*.

ASSEMBLING THE TOOL TO APPLY PUSHING OR PULLING FORCE:

- 1. Determine if you want the tool's forcing screw to push or pull.
- To exert pushing force, the forcing nut is installed beneath the cross block, as shown on left.
- To cause the forcing screw to pull, the forcing nut is placed on top of the cross block.
- The sliding plates must always be placed on the opposite side of the cross block from the forcing nut.

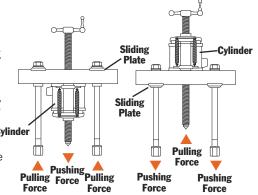

Selection and capacity rating – Each Push-Puller's specified tonnage "capacity" is determined using its standard legs in tension. Using longer legs, or a setup in which the legs are in compression, will reduce the "capacity". Always select the largest "capacity" puller and the shortest legs that will fit the job.

Power Twin® cylinder – This unique center-hole cylinder powers each Push-Puller®. Puller screw runs right between the twin spring cylinder. A basic head allows you to change from a tapped hole to a plain hole by merely changing the head insert.

171/2 ton capacity Push-Puller® -

No. PPH17 — Push-Puller* with RT172 center-hole Power Twin* cylinder, cylinder half coupler, P55 pump, 9767 6-ft. hose, 9798 hose half coupler, 16½" legs, 24827 leg ends, 1"-8 x 20" lg. adjusting screw and adjusting crank. Wt., 59 lbs.

No. PPH17R – Same as above, but without P55pump, 9767 6-ft. hose and 9798 hose half coupler. Wt.,40 lbs.

No. 1062 – Puller only. (Cylinder, pump, hose, coupler, screw and crank not included.) Wt., 20 lbs.

USE WITH:

Bearing pulling attachments: Nos. 1124 and 1130.

Pulley pulling attachment: **No. 679**. Internal pulling attachment: **No. 1154**.

Legs: Nos. 1104, 1105, 1106, 1107 and 1108 - Pair of legs for $17^{1}/_{2}$ -ton "ca-

pacity" Push-Puller®.





Leg Ends – Upper leg ends are threaded ³/₄"-16. Lower leg ends are threaded ⁵/₈"-18" lg.



PPH30 1109 1110 1111 Reach **Spread** 7"-161/4" **Note:** L = leg length: 8", 18", 28"; subtract 57/8" from leg length to determine reach 8 lbs. when using leg end caps. 18" 15 lbs. Leg ends are threaded $1"-14 \times 1^{1}/_{4}"$ lg.

30 ton capacity Push-Puller® -

No. PPH30 – Push-Puller® with RT302 center-hole Power Twin® cylinder, cylinder half coupler, P55 pump, 9767 6-ft. hose, 9798 hose half coupler, 18" legs, 28390 leg ends, $1^{1}/_{4}$ "-7 x 24" lg. adjusting screw and adjusting crank. Wt., 102 lbs.

No. PPH30R – Same as above, but without P55 pump, 9767 6-ft. hose and 9798 hose half coupler. Wt., 82 lbs.

No. 1070 – Puller only. (Cylinder, pump, hose, coupler, screw and crank not included.) Wt., 42 lbs.

USE WITH:

Bearing pulling attachments. **No. 680** (Use two 8012 adapters to connect to puller.)

Pulley pulling attachment: **No. 679**. Internal pulling attachment: **No. 1166**.

Legs: **Nos. 1109, 1110 and 1111 -** Pair of legs for 30 ton "capacity" Push-Puller*.

50 ton capacity Push-Puller® -

No. PPH50 — Push-Puller* with RT503 center-hole Power Twin* cylinder, cylinder half coupler, P55 pump, 9767 6-ft. hose, 9798 hose half coupler, 24" legs, $1^5/8$ "- $5^1/2$ x $30^3/8$ " lg. adjusting screw and adjusting crank. Wt., 201 lbs.


No. PPH50R – Same as above, but without P55 pump, 9767 6-ft. hose and 9798 hose half coupler. Wt., 181 lbs.

No. 1076 – Puller only. (Cylinder, pump, hose, coupler, screw and crank not included.) Wt., 106 lbs.


USE WITH:


Bearing pulling attachments: Nos. 1128 and 1129.

Legs: **Nos. 1112 and 1113 -** Pair of legs for 50 ton "capacity" Push-Puller^a.

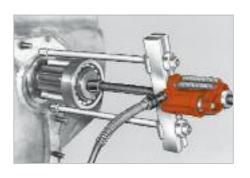



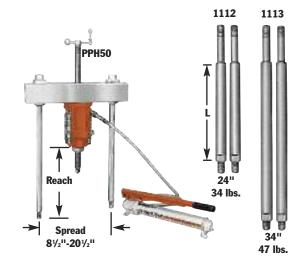

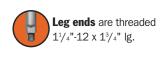



22 lbs.